
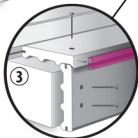


PERMA
DECK Quick Guide
Composite Decking

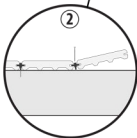

- 1 Starter clip installation on the house side of the deck.
- 2 Equator hidden fastener installation example.
- 3 Fascia board installation with the edge trimmed for a flush finish.
- 4 Trimming of equator hidden fastener to be installed on breaker board intersection.